

Data sheet

Check valve

Types NRV and NRVH



NRV and NRVH can be used in liquid suction and hot gas lines in refrigeration and air conditioning plants.

The valves ensure the correct flow direction and prevent back-condensation from a warm part of the system to the cold evaporator.

The hermetic tight design of solder versions meet the environmental demands for today and future.

A built-in damping piston makes the valves suitable for installation in lines where pulsation can occur, e. g. in the discharge line from the compressor.

Features

- Ensure correct flow direction
- Available in both straightway and angleway versions
- Prevents back-condensation from warm to cold system part
- Solder versions are compliant with ATEX hazard zone 2
- Hermetic tight design for solder versions
- Built-in damping piston that makes the valves suitable for installation in lines where pulsation can occur, e.g. in the discharge line from the compressor
- NRVH type check valve is with stronger spring and it's recommended to use for compressors in parallel (i.e. power packs) where higher level of pulsation and vibration are expected
- Oversize connections provide flexibility in use

Approvals

Technical data

Refrigerants	R134a, R22/R407C, R404A/R507, R407A, R407F, R410A, R32, R290, R600, R600a, R1270, R448A, R449A, R450A, R452A, R452B, R454B, R513A, R1234ze, R1234yf
Media temperature range	-50 – 140 °C / -58 – 285 °F
Max. working pressure (PS/MWP)	46 bar / 667 psig



Note: Only solder version, connection sizes from 6 s to 22 s are allowed for flammable refrigerant

- This product is approved for R290, R600, R600a and R1270 by ignition source assessment in accordance to standard EN13463-1. R1234ze can be used for NRV size up to 35s according to the PED category I, Fluid II
- For a fully updated list of approved refrigerants, visit www.products.danfoss.com and search for individual code numbers, where refrigerants are listed as part of product specifications

Dimensioning and selection

When selecting the right Danfoss check valve the capacity tables should be utilised together with plant requirements concerning piping and connection sizes. The optimum solution should include the highest capacity at lowest pressure drop across the valve before it closes. Further, when dimensioning and selecting Danfoss check valves for mounting into the compressor discharge line, it is important to be aware of the following:


The differential pressure across the valve must always be higher than the given minimum pressure drop at which the valve is completely open. This also applies to lowest capacities for compressor with capacity regulation.

NRVH type check valve is with stronger spring and it's recommended to use for compressors in parallel (i.e. power packs) where higher level of pulsation and vibration are expected.

Ordering

Straightway Flare Version without flare nut

Valve type	Connection type	Connection		Pressure drop across valve Δp ²⁾		K_v value ³⁾ (calculated value)	C_v value ³⁾ (calculated value)	Code no.
		[in]	[mm]	[bar]	[psi]	[m³/h]	[gal/min]	
NRV 6	Straight-way - flare	1/4	6	0.07	1.01	0.56	0.65	020-1040
NRV 10	Straight-way - flare	3/8	10	0.07	1.01	1.2	1.39	020-1041
NRV 12	Straight-way - flare	1/2	12	0.05	0.72	2.05	2.37	020-1042
NRV 16	Straight-way - flare	5/8	16	0.05	0.72	3.6	4.16	020-1043
NRV 19	Straight-way - flare	3/4	19	0.05	0.72	5.5	6.36	020-1044

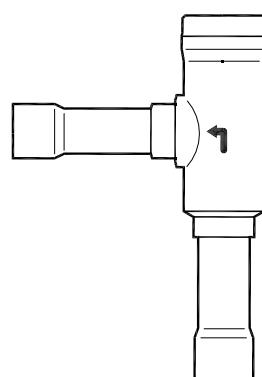Angleway Solder ODF Version


Valve type	Connection type	Connection		Pressure drop across valve Δp ²⁾		K_v value ³⁾ (calculated value)	C_v value ³⁾ (calculated value)	Code no.
		[in]	[mm]	[bar]	[psi]	[m³/h]	[gal/min]	
NRV 22s	Angle-way - solder	7/8	22	0.04	0.58	8.5	9.83	020-1020
NRVH 22s	Angle-way - solder	7/8	22	0.30	4.35	8.5	9.83	020-1032
NRV 22s¹⁾	Angle-way - solder	1 1/8	—	0.04	0.58	8.5	9.83	020-1060
	Angle-way - solder	—	28	0.04	0.58	8.5	9.83	020-1055
NRVH 22s¹⁾	Angle-way - solder	1 1/8	—	0.30	4.35	8.5	9.83	020-1072
	Angle-way - solder	—	28	0.30	4.35	8.5	9.83	020-1067
NRV 28s	Angle-way - solder	1 1/8	—	0.04	0.58	16.5	19.07	020-1021
	Angle-way - solder	—	28	0.04	0.58	16.5	19.07	020-1025
NRVH 28s	Angle-way - solder	1 1/8	—	0.30	4.35	16.5	19.07	020-1029
	Angle-way - solder	—	28	0.30	4.35	16.5	19.07	020-1033
NRV 28s¹⁾	Angle-way - solder	1 3/8	35	0.04	0.58	16.5	19.07	020-1056
NRVH 28s¹⁾	Angle-way - solder	1 3/8	35	0.30	4.35	16.5	19.07	020-1068
NRV 35s	Angle-way - solder	1 3/8	35	0.04	0.58	29	33.52	020-1026
NRVH 35s	Angle-way - solder	1 3/8	35	0.30	4.35	29	33.52	020-1034
NRV 35s¹⁾	Angle-way - solder	1 5/8	—	0.04	0.58	29	33.52	020-1061
	Angle-way - solder	—	42	0.04	0.58	29	33.52	020-1027
NRVH 35s¹⁾	Angle-way - solder	1 5/8	—	0.30	4.35	29	33.52	020-1073
	Angle-way - solder	—	42	0.30	4.35	29	33.52	020-1035

¹⁾ Oversize connections

²⁾ Δp = the minimum pressure at which the valve is completely open

The NRVH with a stronger spring is used in the discharge line from compressors connected in parallel

³⁾ The K_v / C_v value is the flow of water in [m³/h - gal/min] at a pressure drop across valve of 1 bar/14.5 psig

**Ordering
(continued)**

Straightway Solder ODF Version

Valve type	Connection type	Connection		Pressure drop across valve Δp ²⁾		K_v value ³⁾ (calculated value)	C_v value ³⁾ (calculated value)	Code no.
		[in]	[mm]	[bar]	[psi]			
NRV 6s	Straight-way - Solder	1/4	–	0.07	1.01	0.56	0.65	020-1010
	Straight-way - Solder	–	6	0.07	1.01	0.56	0.65	020-1014
NRV 6s¹⁾	Straight-way - Solder	3/8	–	0.07	1.01	0.56	0.65	020-1057
	Straight-way - Solder	–	10	0.07	1.01	0.56	0.65	020-1050
NRVH 6s¹⁾	Straight-way - Solder	3/8	–	0.30	4.35	0.56	0.65	020-1069
	Straight-way - Solder	–	10	0.30	4.35	0.56	0.65	020-1062
NRV 10s	Straight-way - Solder	3/8	–	0.07	1.01	1.20	1.39	020-1011
	Straight-way - Solder	–	10	0.07	1.01	1.20	1.39	020-1015
NRVH 10s	Straight-way - Solder	3/8	–	0.30	4.35	1.20	1.39	020-1046
	Straight-way - Solder	–	10	0.30	4.35	1.20	1.39	020-1036
NRVH 10s¹⁾	Straight-way - Solder	1/2	–	0.07	1.01	1.20	1.39	020-1058
	Straight-way - Solder	–	12	0.07	1.01	1.20	1.39	020-1051
NRVH 10s¹⁾	Straight-way - Solder	1/2	–	0.30	4.35	1.20	1.39	020-1070
	Straight-way - Solder	–	12	0.30	4.35	1.20	1.39	020-1063
NRV 12s	Straight-way - Solder	1/2	–	0.05	0.72	2.05	2.37	020-1012
	Straight-way - Solder	–	12	0.05	0.72	2.05	2.37	020-1016
NRVH 12s	Straight-way - Solder	1/2	–	0.30	4.35	2.05	2.37	020-1039
	Straight-way - Solder	–	12	0.30	4.35	2.05	2.37	020-1037
NRV 12s¹⁾	Straight-way - Solder	5/8	16	0.05	0.72	2.05	2.37	020-1052
NRVH 12s¹⁾	Straight-way - Solder	5/8	16	0.30	4.35	2.05	2.37	020-1064
NRV 16s	Straight-way - Solder	5/8	16	0.05	0.72	3.60	4.16	020-1018
NRVH 16s	Straight-way - Solder	5/8	16	0.30	4.35	3.60	4.16	020-1038
NRV 16s¹⁾	Straight-way - Solder	–	18	0.05	0.72	3.60	4.16	020-1053
NRVH 16s¹⁾	Straight-way - Solder	–	18	0.30	4.35	3.60	4.16	020-1065
NRV 16s¹⁾	Straight-way - Solder	3/4	19	0.05	0.72	3.60	4.16	020-1059
NRVH 16s¹⁾	Straight-way - Solder	3/4	19	0.30	4.35	3.60	4.16	020-1071
NRV 19s	Straight-way - Solder	–	18	0.05	0.72	5.50	6.36	020-1017
NRVH 19s	Straight-way - Solder	–	18	0.30	4.35	5.50	6.36	020-1008
NRV 19s	Straight-way - Solder	3/4	19	0.05	0.72	5.50	6.36	020-1019
NRVH 19s	Straight-way - Solder	3/4	19	0.30	4.35	5.50	6.36	020-1023
NRV 19s¹⁾	Straight-way - Solder	7/8	22	0.05	0.72	5.50	6.36	020-1054
NRVH 19s¹⁾	Straight-way - Solder	7/8	22	0.30	4.35	5.50	6.36	020-1066

¹⁾ Oversize connections

²⁾ Δp = the minimum pressure at which the valve is completely open

The NRVH with a stronger spring is used in the discharge line from compressors connected in parallel

³⁾ The K_v/C_v value is the flow of water in [m³/h - gal/min] at a pressure drop across valve of 1 bar/14.5 psig

 $\rho = 1000 \text{ kg/m}^3 - 2205 \text{ lbs/G}$

Data sheet | Check valve, types NRV and NRVH

Capacity

Liquid capacity (kW)

Type	Liquid capacity ¹⁾ at pressure drop across valve Δp [bar]		
	NRV		NRV/ NRVH
	0.05	0.07	0.14
			0.3 ²⁾

R22

NRV/NRVH 6	–	7.70	10.9	15.9
NRV/NRVH 10	–	16.5	23.3	34.1
NRV/NRVH 12	23.8	28.2	39.8	58.3
NRV/NRVH 16	41.8	49.5	70.0	102
NRV/NRVH 19	63.9	75.6	107	157
NRV/NRVH 22	98.7	117	165	242
NRV/NRVH 28	192	227	321	469
NRV/NRVH 35	337	399	564	825

R134a

NRV/NRVH 6	–	7.10	10.1	14.7
NRV/NRVH 10	–	15.3	21.6	31.6
NRV/NRVH 12	22.0	26.1	36.9	53.9
NRV/NRVH 16	38.7	45.8	64.7	94.7
NRV/NRVH 19	59.1	69.9	98.9	145
NRV/NRVH 22	91.3	108	153	224
NRV/NRVH 28	177	300	297	434
NRV/NRVH 35	312	369	521	763

R404A/R507

NRV/NRVH 6	–	5.20	7.40	10.8
NRV/NRVH 10	–	11.2	15.8	23.1
NRV/NRVH 12	16.1	19.1	27.0	39.5
NRV/NRVH 16	28.3	33.5	47.4	69.3
NRV/NRVH 19	43.2	51.2	72.4	106
NRV/NRVH 22	66.8	79.1	112	164
NRV/NRVH 28	130	154	217	318
NRV/NRVH 35	228	270	382	559

¹⁾ Rated liquid capacities are based on:

- Evaporating temperature, $t_e = -10^\circ\text{C}$
- Condensing temperature, $t_c = 30^\circ\text{C}$
- Subcooling $\Delta t_{sub} = 5\text{ K}$

²⁾ Capacity for NRVH

The table values refer to the evaporator capacity

Correction factors

When selecting the evaporator capacity is to be multiplied by a correction factor depending on the liquid temperature t_l ahead of the valve/the evaporator. The corrected capacity can then be found from the table.

Correction factors for liquid temperature t_l

$t_l [^\circ\text{C}]$	-10	0	10	15	20	25	30	35	40	45	50
R22	0.77	0.82	0.88	0.92	0.96	1.00	1.05	1.10	1.16	1.22	1.30
R134a	0.73	0.79	0.86	0.90	0.95	1.00	1.06	1.12	1.19	1.28	1.37
R404A/R507	0.67	0.74	0.82	0.87	0.93	1.00	1.08	1.17	1.29	1.43	1.61

SI units

Suction vapour capacity (kW)

Type	Pressure drop across valve Δp [bar]	Suction vapour capacity ¹⁾ at evaporating temperature t_e [°C]			
		-30 -10 0 5			
		NRV	NRV/ NRVH	0.05	0.07
				0.14	0.3 ²⁾

Hot gas capacity (kW)

Type	Hot gas capacity ¹⁾ at pressure drop across valve Δp [bar]			
	NRV		NRV/ NRVH	0.05
	0.07	0.14	0.3 ²⁾	

R22

NRV/NRVH 6	–	1.40	2.00	2.80
NRV/NRVH 10	–	3.00	4.20	6.10
NRV/NRVH 12	4.3	5.10	7.20	10.0
NRV/NRVH 16	7.6	8.90	12.6	18.3
NRV/NRVH 19	11.5	13.6	19.2	27.9
NRV/NRVH 22	17.8	21.1	29.7	43.1
NRV/NRVH 28	34.6	40.9	57.7	83.7
NRV/NRVH 35	60.9	71.9	101	147

R134a

NRV/NRVH 6	–	1.1	1.6	2.2
NRV/NRVH 10	–	2.4	3.3	4.8
NRV/NRVH 12	3.4	4.0	5.7	8.2
NRV/NRVH 16	6.0	7.1	10.0	14.4
NRV/NRVH 19	9.2	10.8	15.2	22.0
NRV/NRVH 22	14.2	16.8	23.6	34.0
NRV/NRVH 28	27.5	32.5	45.7	66.0
NRV/NRVH 35	48.4	57.2	80.4	116

R404A/R507

NRV/NRVH 6	–	1.2	1.7	2.4
NRV/NRVH 10	–	2.6	3.6	5.2
NRV/NRVH 12	3.70	4.4	6.2	9.0
NRV/NRVH 16	6.50	7.7	10.8	15.7
NRV/NRVH 19	9.90	11.7	16.6	24.1
NRV/NRVH 22	15.3	18.1	25.6	37.2
NRV/NRVH 28	29.8	35.2	49.7	72.2
NRV/NRVH 35	52.4	61.9	87.3	127

¹⁾ Rated hot gas capacities are based on:

- Suction superheat $sh = 0\text{ K}$
- Condensing temperature, $t_c = 30^\circ\text{C}$
- Subcooling $\Delta t_{sub} = 5\text{ K}$
- Hot gas temperature, $t_h = 60^\circ\text{C}$ ahead of the valve
- Discharge temperature, $t_d = 80^\circ\text{C}$ after compressor

²⁾ Capacity for NRVH

The table values refer to the evaporator capacity

Data sheet | Check valve, types NRV and NRVH

Capacity

Liquid capacity (kW)

Type	Liquid capacity ¹⁾ at pressure drop across valve Δp [bar]			
	NRV		NRV/ NRVH	
	0.05	0.07	0.14	0.3 ²⁾
R410A				
NRV/NRVH 6	–	7.50	10.7	15.6
NRV/NRVH 10	–	16.2	22.9	33.5
NRV/NRVH 12	23.3	27.6	39.1	57.2
NRV/NRVH 16	41.0	48.5	68.6	100
NRV/NRVH 19	62.6	74.1	105	153
NRV/NRVH 22	96.8	115	162	237
NRV/NRVH 28	188	222	314	460
NRV/NRVH 35	330	391	552	809

R448A

NRV/NRVH 6	–	6.80	9.70	14.2
NRV/NRVH 10	–	14.7	20.7	30.3
NRV/NRVH 12	21.2	25.0	35.4	51.8
NRV/NRVH 16	37.1	44.0	62.2	91.0
NRV/NRVH 19	56.7	67.1	95.0	139
NRV/NRVH 22	87.7	104	147	215
NRV/NRVH 28	170	201	285	417
NRV/NRVH 35	299	354	501	733

R449A

NRV/NRVH 6	–	6.70	9.50	13.9
NRV/NRVH 10	–	14.4	20.3	29.8
NRV/NRVH 12	20.8	24.6	34.7	50.9
NRV/NRVH 16	36.5	43.2	61.0	89.3
NRV/NRVH 19	55.7	65.9	93.2	136.5
NRV/NRVH 22	86.1	102	144	211
NRV/NRVH 28	167	198	280	409
NRV/NRVH 35	294	348	492	720

¹⁾ Rated liquid capacities are based on:

- Evaporating temperature, $t_e = -10^\circ\text{C}$
- Condensing temperature, $t_c = 30^\circ\text{C}$
- Subcooling $\Delta t_{sub} = 5\text{ K}$

²⁾ Capacity for NRVH

The table values refer to the evaporator capacity

Correction factors

When selecting the evaporator capacity is to be multiplied by a correction factor depending on the liquid temperature t_l ahead of the valve/the evaporator. The corrected capacity can then be found from the table.

Correction factors for liquid temperature t_l

$t_l [\text{ }^\circ\text{C}]$	-10	0	10	15	20	25	30	35	40	45	50
R410A	0.72	0.78	0.85	0.90	0.95	1.00	1.06	1.14	1.22	1.32	1.45
R448A	0.72	0.78	0.85	0.90	0.95	1.00	1.06	1.13	1.22	1.31	1.43
R449A	0.71	0.77	0.85	0.89	0.94	1.00	1.06	1.14	1.22	1.32	1.44

Suction vapour capacity (kW)

Type	Pressure drop across valve Δp [bar]	Suction vapour capacity ¹⁾ at evaporating temperature t_e [°C]			
		t_e [°C]			
		-30	-10	0	5
R410A					
NRV/NRVH 6	0.07	0.71	1.08	1.30	1.41
NRV/NRVH 10	0.07	1.52	2.31	2.78	3.03
NRV/NRVH 12	0.05	2.20	3.34	4.02	4.38
NRV/NRVH 16	0.05	3.86	5.86	7.05	7.70
NRV/NRVH 19	0.05	5.90	8.95	10.8	11.8
NRV/NRVH 22	0.05	9.11	13.8	16.7	18.2
NRV/NRVH 28	0.05	17.7	26.9	32.3	35.3
NRV/NRVH 35	0.05	31.1	47.2	56.8	62.0

Hot gas capacity (kW)

Type	Hot gas capacity ¹⁾ at pressure drop across valve Δp [bar]			
	NRV		NRV/ NRVH	
	0.05	0.07	0.14	0.3 ²⁾
R410A				
NRV/NRVH 6	–	1.7	2.4	3.5
NRV/NRVH 10	–	3.6	5.1	7.5
NRV/NRVH 12	5.3	6.2	8.8	12.8
NRV/NRVH 16	9.3	10.9	15.4	22.5
NRV/NRVH 19	14.1	16.7	23.6	34.4
NRV/NRVH 22	21.9	25.9	36.5	53.1
NRV/NRVH 28	42.4	50.2	70.8	103
NRV/NRVH 35	74.6	88.2	124	181

R448A

NRV/NRVH 6	–	1.4	2.0	3.0
NRV/NRVH 10	–	3.1	4.4	6.4
NRV/NRVH 12	4.5	5.3	7.5	10.9
NRV/NRVH 16	7.9	9.3	13.1	19.1
NRV/NRVH 19	12.0	14.2	20.0	29.1
NRV/NRVH 22	18.6	22.0	31.0	45.0
NRV/NRVH 28	36.1	42.6	60.1	87.4
NRV/NRVH 35	63.4	74.9	106	154

R449A

NRV/NRVH 6	–	1.4	2.0	2.9
NRV/NRVH 10	–	3.1	4.3	6.3
NRV/NRVH 12	4.4	5.2	7.4	10.7
NRV/NRVH 16	7.8	9.2	12.9	18.8
NRV/NRVH 19	11.9	14.0	19.8	28.7
NRV/NRVH 22	18.3	21.7	30.5	44.4
NRV/NRVH 28	35.6	42.0	59.3	86.1
NRV/NRVH 35	62.5	73.9	104	151

¹⁾ Rated hot gas capacities are based on:

- Suction superheat $sh = 0\text{ K}$
- Condensing temperature, $t_c = 30^\circ\text{C}$
- Subcooling $\Delta t_{sub} = 5\text{ K}$

The table values refer to the evaporator capacity

²⁾ Capacity for NRVH

The table values refer to the evaporator capacity

Data sheet | Check valve, types NRV and NRVH

Capacity

Liquid capacity (kW)

Type	Liquid capacity ¹⁾ at pressure drop across valve Δp [bar]			
	NRV		NRV/NRVH	
	0.05	0.07	0.14	0.3 ²⁾

R32

NRV/NRVH 6	-	10.8	15.2	22.3
NRV/NRVH 10	-	23.1	32.7	47.8
NRV/NRVH 12	33.4	39.5	55.8	81.7
NRV/NRVH 16	58.6	69.3	98.0	144
NRV/NRVH 19	89.5	106	150	219
NRV/NRVH 22	139	164	231	339

R290

NRV/NRVH 6	-	8.60	12.1	17.7
NRV/NRVH 10	-	18.4	26.0	38.0
NRV/NRVH 12	26.5	31.4	44.3	64.9
NRV/NRVH 16	46.5	55.1	77.9	114
NRV/NRVH 19	71.1	84.1	119	174
NRV/NRVH 22	110	130	184	269

R600

NRV/NRVH 6	-	9.70	13.7	20.1
NRV/NRVH 10	-	20.8	29.4	43.0
NRV/NRVH 12	30.0	35.5	50.2	73.5
NRV/NRVH 16	52.7	62.3	88.1	129
NRV/NRVH 19	80.5	95.2	135	197
NRV/NRVH 22	124	147	208	305

R600a

NRV/NRVH 6	-	8.60	12.2	17.9
NRV/NRVH 10	-	18.5	26.1	38.3
NRV/NRVH 12	26.7	31.6	44.7	65.4
NRV/NRVH 16	46.9	55.5	78.4	115
NRV/NRVH 19	71.6	84.7	120	175
NRV/NRVH 22	111	131	185	271

¹⁾ Rated liquid capacities are based on:

- Evaporating temperature, $t_e = -10 \text{ }^{\circ}\text{C}$
- Condensing temperature, $t_c = 30 \text{ }^{\circ}\text{C}$
- Subcooling $\Delta t_{sub} = 5 \text{ K}$

²⁾ Capacity for NRVH

The table values refer to the evaporator capacity

Correction factors

When selecting the evaporator capacity is to be multiplied by a correction factor depending on the liquid temperature t_l ahead of the valve/the evaporator. The corrected capacity can then be found from the table.

Correction factors for liquid temperature t_l

$t_l \text{ [}^{\circ}\text{C]}$	-10	0	10	15	20	25	30	35	40	45	50
R32	0.76	0.82	0.88	0.92	0.96	1.00	1.05	1.11	1.17	1.24	1.33
R290	0.73	0.79	0.86	0.90	0.95	1.00	1.06	1.12	1.19	1.28	1.38
R600	0.77	0.82	0.88	0.92	0.96	1.00	1.05	1.10	1.16	1.22	1.29
R600a	0.75	0.80	0.87	0.91	0.95	1.00	1.05	1.11	1.18	1.25	1.33



Note: Only solder version, connection sizes from 6 s to 22 s are allowed for flammable refrigerant.

Data sheet | Check valve, types NRV and NRVH

Capacity

Liquid capacity [TR]

Type	Liquid capacity ¹⁾ at pressure drop across valve Δp [psi]					
	NRV	NRV/ NRVH	0.73	1.02	2.03	4.4 ²⁾
R410A						

NRV/NRVH 6	0.70	2.10	3.00	4.50
NRV/NRVH 10	1.40	4.60	6.50	9.60
NRV/NRVH 12	6.70	7.90	11.1	16.3
NRV/NRVH 16	11.7	13.8	19.5	28.7
NRV/NRVH 19	17.9	21.1	29.8	43.9
NRV/NRVH 22	27.6	32.6	46.0	67.8
NRV/NRVH 28	53.6	63.3	89.4	132
NRV/NRVH 35	94.2	111	157	231

R448A

NRV/NRVH 6	0.60	1.90	2.70	4.00
NRV/NRVH 10	1.30	4.20	5.90	8.70
NRV/NRVH 12	6.00	7.10	10.1	14.8
NRV/NRVH 16	10.6	12.5	17.7	26.0
NRV/NRVH 19	16.2	19.1	27.0	39.7
NRV/NRVH 22	25.0	29.6	41.7	61.4
NRV/NRVH 28	48.6	57.4	81.0	119
NRV/NRVH 35	85.4	101	142	210

R449A

NRV/NRVH 6	0.60	1.90	2.70	4.00
NRV/NRVH 10	1.30	4.10	5.80	8.50
NRV/NRVH 12	5.90	7.00	9.90	14.5
NRV/NRVH 16	10.4	12.3	17.3	25.5
NRV/NRVH 19	15.9	18.8	26.5	39.0
NRV/NRVH 22	24.6	29.0	41.0	60.3
NRV/NRVH 28	47.7	56.4	79.5	117
NRV/NRVH 35	83.8	99.1	140	206

1) Rated liquid capacities are based on:

- Evaporating temperature, $t_e = 14^\circ F$
- Condensing temperature, $t_c = 86^\circ F$
- Subcooling $\Delta t_{sub} = 9^\circ F$

2) Capacity for NRVH

The table values refer to the evaporator capacity

Correction factors

When selecting the evaporator capacity is to be multiplied by a correction factor depending on the liquid temperature t_l ahead of the valve/the evaporator. The corrected capacity can then be found from the table.

Correction factors for liquid temperature t_l

$t_l [^\circ F]$	14	32	50	59	68	77	86	95	104	113	122
R410A	0.72	0.78	0.85	0.90	0.95	1.00	1.06	1.14	1.22	1.32	1.45
R448A	0.72	0.78	0.85	0.90	0.95	1.00	1.06	1.13	1.22	1.31	1.43
R449A	0.71	0.77	0.85	0.89	0.94	1.00	1.06	1.14	1.22	1.32	1.44

Data sheet | Check valve, types NRV and NRVH

Capacity

Liquid capacity [TR]

Type	Liquid capacity ¹⁾ at pressure drop across valve Δp [psi]					
	NRV	NRV/ NRVH	0.73	1.02	2.03	4.4 ²⁾
R1270	0.80	2.50	3.60	5.30		
NRV/NRVH 6	1.70	5.40	7.70	11.3		
NRV/NRVH 10	7.80	9.30	13.1	19.2		
NRV/NRVH 12	13.8	16.3	23.0	33.8		
NRV/NRVH 16	21.0	24.9	35.1	51.6		
NRV/NRVH 19	32.5	38.4	54.2	79.8		

R1270

NRV/NRVH 6	0.80	2.50	3.60	5.30
NRV/NRVH 10	1.70	5.40	7.70	11.3
NRV/NRVH 12	7.80	9.30	13.1	19.2
NRV/NRVH 16	13.8	16.3	23.0	33.8
NRV/NRVH 19	21.0	24.9	35.1	51.6
NRV/NRVH 22	32.5	38.4	54.2	79.8

R452B

NRV/NRVH 6	0.79	2.6	3.6	5.3
NRV/NRVH 10	1.7	5.5	7.8	11.4
NRV/NRVH 12	8.0	9.4	13.3	19.5
NRV/NRVH 16	14.0	16.5	23.3	34.3
NRV/NRVH 19	21.3	25.2	35.6	52.4
NRV/NRVH 22	33.0	39.0	55.0	80.9

R454B

NRV/NRVH 6	0.80	2.50	3.50	5.20
NRV/NRVH 10	1.70	5.40	7.60	11.1
NRV/NRVH 12	7.70	9.20	12.9	19.0
NRV/NRVH 16	13.6	16.1	22.7	33.4
NRV/NRVH 19	20.8	24.6	34.6	51.0
NRV/NRVH 22	32.1	38.0	53.5	78.8

R1234yf

NRV/NRVH 6	0.50	1.50	2.10	3.10
NRV/NRVH 10	1.00	3.20	4.50	6.70
NRV/NRVH 12	4.70	5.50	7.80	11.4
NRV/NRVH 16	8.20	9.70	13.6	20.1
NRV/NRVH 19	12.5	14.8	20.8	30.7
NRV/NRVH 22	19.3	22.8	32.2	47.4

¹⁾ Rated liquid capacities are based on:

- Evaporating temperature, $t_e = 14^\circ F$
- Condensing temperature, $t_c = 86^\circ F$
- Subcooling $\Delta t_{sub} = 9^\circ F$

²⁾ Capacity for NRVH

The table values refer to the evaporator capacity

Correction factors

When selecting the evaporator capacity is to be multiplied by a correction factor depending on the liquid temperature t_l ahead of the valve/the evaporator. The corrected capacity can then be found from the table.

Correction factors for liquid temperature t_l

$t_l [^\circ F]$	14	32	50	59	68	77	86	95	104	113	122
R1270	0.74	0.79	0.87	0.91	0.95	1.00	1.06	1.12	1.19	1.27	1.37
R452B	0.68	0.71	0.74	0.75	0.76	0.78	0.80	0.81	0.83	0.85	0.87
R454B	0.74	0.80	0.87	0.91	0.95	1.00	1.06	1.12	1.19	1.28	1.38
R1234yf	0.69	0.75	0.84	0.88	0.94	1.00	1.07	1.15	1.25	1.36	1.49




Note: Only solder version, connection sizes from 6 s to 22 s are allowed for flammable refrigerant.

- For capacity calculation of other refrigerants, please contact Danfoss.

Data sheet | Check valve, types NRV and NRVH

Dimensions and weights

NRV 6 - 19

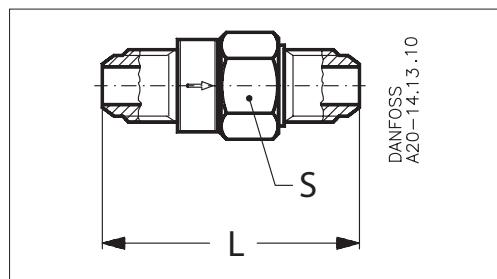

Flare straightway connection - SI Units

Type	Size		L [mm]	Spanner flats S [mm]	Net weight [kg]
	[in]	[mm]			
NRV 6	1/4	6	55	19	0.07
NRV 10	3/8	10	60	19	0.08
NRV 12	1/2	12	70	24	0.14
NRV 16	5/8	16	81	28	0.20
NRV 19	3/4	19	95	34	0.34


Flare straightway connection - US Units

Type	Size		L [in]	Spanner flats S [in]	Net weight [lbs]
	[in]	[mm]			
NRV 6	1/4	6	2.17	0.75	0.15
NRV 10	3/8	10	2.36	0.75	0.19
NRV 12	1/2	12	2.76	0.94	0.30
NRV 16	5/8	16	3.19	1.10	0.45
NRV 19	3/4	19	3.74	1.34	0.75

Data sheet | Check valve, types NRV and NRVH

Dimensions and weights

NRV 6s - 19s / NRVH 6s - 19s

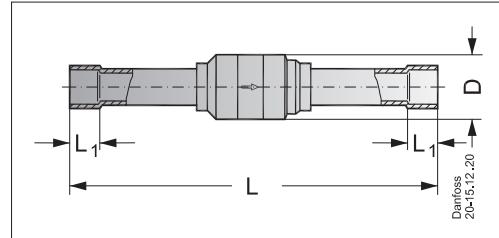

Solder straightway connection - SI Units

Type	Size		L [mm]	L_1 [mm]	ϕD [mm]	Net weight [kg]
	[in]	[mm]				
NRV/NRVH 6s	$1/4$	6	92	7	18	0.06
NRV/NRVH 6s¹⁾	$3/8$	10	95	9	18	0.07
NRV/NRVH 10s	$3/8$	10	109	9	18	0.06
NRV/NRVH 10s¹⁾	$1/2$	12	109	10	18	0.07
NRV/NRVH 12s	$1/2$	12	131	10	22	0.10
NRV/NRVH 12s¹⁾	$5/8$	16	131	12	22	0.11
NRV/NRVH 16s	$5/8$	16	139	12	28	0.17
NRV/NRVH 16s¹⁾	—	18	139	14	28	0.19
NRV/NRVH 19s	—	18	165	14	34	0.28
NRV/NRVH 16s¹⁾	$3/4$	19	139	14	28	0.19
NRV/NRVH 19s	$3/4$	19	165	14	34	0.29
NRV/NRVH 19s¹⁾	$7/8$	22	165	17	34	0.29


Solder straightway connection - US Units

Type	Size		L [in]	L_1 [in]	ϕD [in]	Net weight [lbs]
	[in]	[mm]				
NRV/NRVH 6s	$1/4$	3.62	0.28	0.71	0.14	
NRV/NRVH 6s¹⁾	$3/8$	3.74	0.35	0.71	0.16	
NRV/NRVH 10s	$3/8$	4.29	0.35	0.71	0.14	
NRV/NRVH 10s¹⁾	$1/2$	4.29	0.39	0.71	0.16	
NRV/NRVH 12s	$1/2$	5.16	0.39	0.87	0.22	
NRV/NRVH 12s¹⁾	$5/8$	5.16	0.47	0.87	0.24	
NRV/NRVH 16s	$5/8$	5.47	0.47	1.10	0.39	
NRV/NRVH 16s¹⁾	$3/4$	5.47	0.55	1.10	0.43	
NRV/NRVH 19s	$3/4$	6.50	0.55	1.34	0.64	
NRV/NRVH 19s¹⁾	$7/8$	6.50	0.67	1.34	0.64	

¹⁾ Oversize connections.

Dimensions and weights

NRV 22s - 35s / NRVH 22s - 35s

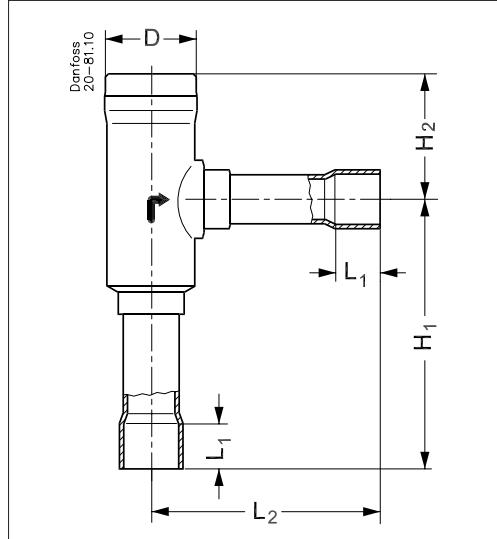

Solder angleway connection - SI Units

Type	Size		H_1 [mm]	H_2 [mm]	L_1 [mm]	L_2 [mm]	ϕD [mm]	Net weight [Kg]
	[in]	[mm]						
NRV/NRVH 22s	7/8	22	94	48	17	87	37	0.58
NRV/NRVH 22s¹⁾	1 1/8	28	94	48	22	87	37	0.61
NRV/NRVH 28s	1 1/8	28	141	67	20	123	49	1.33
NRV/NRVH 28s¹⁾	1 3/8	35	141	67	25	123	49	1.47
NRV/NRVH 35s	1 3/8	35	141	67	25	123	49	1.40
NRV/NRVH 35s¹⁾	1 5/8	42	141	67	29	123	49	1.38

Solder angleway connection - US Units

Type	Size		H_1 [in]	H_2 [in]	L_1 [in]	L_2 [in]	ϕD [in]	Net weight [lbs]
	[in]	[mm]						
NRV/NRVH 22s	7/8	3.70	1.89	0.67	3.43	1.46	1.28	
NRV/NRVH 22s¹⁾	1 1/8	3.70	1.89	0.87	3.43	1.46	1.35	
NRV/NRVH 28s	1 1/8	5.55	2.64	0.79	4.84	1.93	2.93	
NRV/NRVH 28s¹⁾	1 3/8	5.55	2.64	0.98	4.84	1.93	3.26	
NRV/NRVH 35s	1 3/8	5.55	2.64	0.98	4.84	1.93	3.08	
NRV/NRVH 35s¹⁾	1 5/8	5.55	2.64	1.14	4.84	1.93	3.06	

¹⁾ Oversize connections.